



Installation, Operating and Servicing Instructions

Panther Light Duty Hot Cupboard PLH45/XP

Please make a note of your product details for
future use:

Date Purchased: _____

Model Number: _____

Serial Number: _____

Dealer: _____

PANTHER

CONTENTS

Important Information	2
Warnings and Precautions	3
Technical Data	3
Checklist of Enclosures	3
Installation and Commissioning	3-4
Operating Instructions	4
Cleaning	4
Servicing, Maintenance and Component Replacement	5
Fault Finding	5
Spare Parts List	5
Service Information and Guarantee	6

IMPORTANT INFORMATION

Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.

WARNING!

This symbol is used whenever there is a risk of personal injury.

CAUTION!

This symbol is used whenever there is a risk of damaging your Lincat product.

NOTE:

This symbol is used to provide additional information, hints and tips.



KEEP THIS MANUAL FOR FUTURE REFERENCE

WARNINGS AND PRECAUTIONS

This appliance must be installed, commissioned and serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person.

Ensure that the plug/socket is accessible at all times.

Strip plastic coating and clean the appliance before use.

During operation parts may become hot - avoid accidental contact.

Disconnect this appliance before servicing, maintenance or cleaning.

TECHNICAL DATA

Model	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
PLH45/XP	850	450	600	37

CHECK LIST OF ENCLOSURES

Instructions Manual
Shelves

INSTALLATION AND COMMISSIONING

This appliance must be earthed.



An equipotential bonding terminal is provided to allow cross bonding with other equipment.

If replacing the plug connect the terminals as follows:

Green and Yellow wire	Earth	E
Blue wire	Neutral	N
Brown wire	Live	L

Install this appliance on a level surface ensuring all vents are unobstructed.

Model	Power (kW)
PLH45/XP	1.5

OPERATING INSTRUCTIONS

Only qualified or trained personnel should use this appliance.

Connect the appliance to an electrical supply using the attached plug and lead.



Press the bottom right hand button to turn the unit **ON**

The unit is pre-set to the correct heating temperature

Allow the unit a minimum of 20 minutes prior to use.

The ❄️ light will go off when the unit has reached the required temperature.

Periodic illumination of the ❄️ light indicates the thermostat is controlling the element to maintain a constant temperature.

How to Change the Set Point:

1. Push the **SET** key for more than 2 seconds to change the Set point value.
2. The value of the set point will be displayed and the “°C” or “°F” LED starts blinking.
3. To change the Set value push ▲ or ▼ arrows within 10 seconds.
4. To memorise the new set point value push the **SET** key or wait 10 seconds.

CLEANING

Do not use a water jet or steam cleaner, and do not immerse this appliance.

Clean all panels with warm water and mild detergent; do not use abrasive materials. Dry with a soft cloth.

SERVICING, MAINTENANCE AND COMPONENT REPLACEMENT

All servicing, maintenance and component replacement on these appliances should be carried out by one of our recommended service engineers.

FAULT FINDING

Please refer to the Service Helpdesk number on the final page of this manual.

SPARE PARTS LIST

Part Number	Description
EC17	Controller
EL170	Element 750W
FE10	Adjustable foot
FE45	Roller foot
HA106	Door handle
HI82	Door hinge
HI25	Door hinge plate
LE14	Lens cover
PL202	Cable & plug
SH121	Shelf 400 x 530
SW34	Swltch

SERVICE INFORMATION

For help with the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

☎ UK: 01522 875520

For non-UK customers, please contact your local Lincat dealer

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- Brief details of the problem
 - Product code
 - Type number
 - Serial number
- } All available on serial plate

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

GUARANTEE

This unit carries a comprehensive UK mainland 2 year warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights.

The guarantee does not cover:

- Accidental damage, misuse or use not in accordance with the manufacturer's instructions
- Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages. Attendance is based on reasonable access to the appliance to allow the authorised technician to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.