Installation, Operating and Servicing Instructions

Opus 800 Electric Induction Range OE8017

Please make a note of your product details for future use:

Date Purchased:_____

Model Number:_____

Serial Number:_____

Dealer:_____

_____

CONTENTS

Important Information	2
Warnings and Precautions	3
Technical Data	3
Checklist of Enclosures	4
Installation and Commissioning	4-5
Operating Instructions	5-7
Cleaning	8
Servicing, Maintenance and Component Replacement	9
Fault Finding	9
Spare Parts List	9
Service Information and Guarantee	10

IMPORTANT INFORMATION

Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.

WARNING!
This symbol is used whenever there is a risk of personal injury.

CAUTION!
This symbol is used whenever there is a risk of damaging your Lincat product.



NOTE:
This symbol is used to provide additional information, hints and tips.

KEEP THIS MANUAL FOR FUTURE REFERENCE

WARNINGS AND PRECAUTIONS

This appliance must be installed, commissioned and serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

Caution Symbol: Non-ionising electromagnetic radiation (magnetic field).

Warning Symbol: Dangerous voltage (live parts at a working voltage exceeding 250V).

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person.

Ensure that the plug/socket is accessible at all times.

Strip plastic coating and clean the appliance before use.

During operation parts may become hot - avoid accidental contact.

Disconnect this appliance before servicing, maintenance or cleaning.

If the ceramic glass surface is cracked, immediately disconnect the appliance from the supply.

Do not stand on the unit. Surfaces are not to be used for storage.

The ceramic glass is very strong but do not slam pans down onto it and be careful not to scrape pans along the surface.

TECHNICAL DATA

	OE8017
Height (mm)	900
Width (mm)	900
Depth (mm)	800
Weight (kg)	137
Hob zones	4
Hob surface	6mm thick ceramic glass
Electrical supply 3N~+E	400V 3ph 50Hz or 60 Hz
Total power rating (A)	35A per phase
Hob zone power (kW)	4 x 5
Oven power (kW)	4
Total power (kW)	24

CHECK LIST OF ENCLOSURES

Warranty card
Instructions manual

INSTALLATION AND COMMISSIONING

This appliance must be earthed.

An equipotential bonding terminal is provided to allow cross bonding with other equipment.

If replacing the plug connect the terminals as follows:

Green and Yellow wire	Earth	E
Blue wire	Neutral	N
Brown wire	Live	L1
Black wire	Live	L2
Grey wire	Live	L3

Means of isolation with at least 3mm contact separation in all poles must be incorporated into the fixed wiring of this appliance.

The fixed wiring insulation must be protected by insulated sleeving having a temperature rating of at least 60^{o}C.

Supply cords shall be oil resistant, sheathed flexible cable not lighter than ordinary polychloroprene or equivalent elastomer sheathed cord (code 60245 IEC 57)

If the supply cable is replaced, the live conductors must pass through the ferrite ring for EMC compliance. Do not pass the neutral or earth wire through the ferrite ring.

Do not block or restrict the inlet filters on the appliance base. Restricted airflow will result in reduced performance.

Keep means of electrical isolation accessible at all times.

A circuit breaker of type B or C, of suitable current rating should be fitted.

A Residual Current Device (RCD) of suitable current rating and min 30mA trip level should be fitted. A short time delay AC-DC sensitive RCD is recommended.

Install this appliance on a level surface ensuring all vents are unobstructed. Any partitions, walls or furniture must be of non-combustible material. Minimum distances, A 100mm, B 1000mm – see Fig 1.

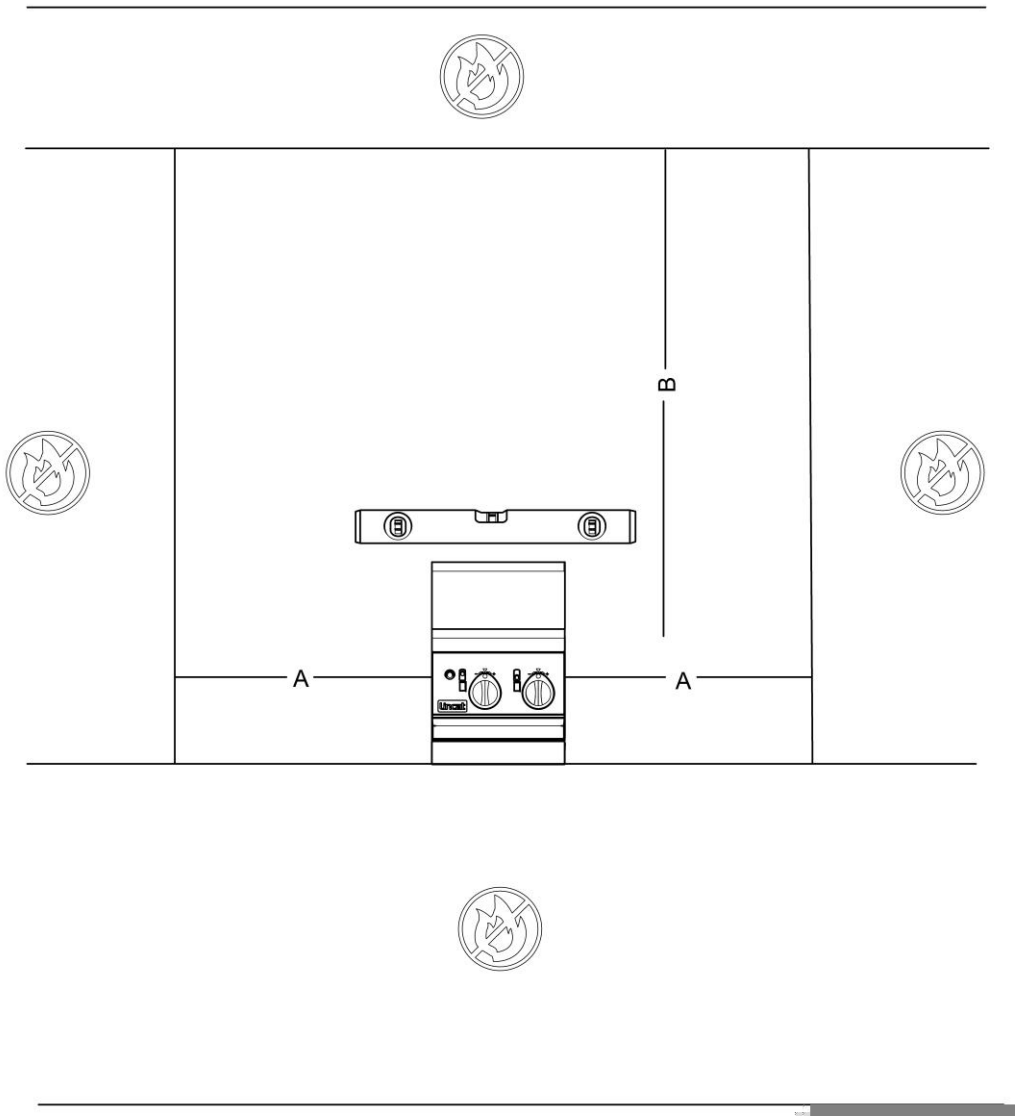

Fig 1

OPERATING INSTRUCTIONS

General Information

Only qualified or trained personnel should use this appliance.

The green neon illuminated indicates power to the appliance.

Hob

When the induction hob is initially switched on, there will be a momentary flashing of the green indicators. Rotate the control knob to the required power level setting.

After use, switch the hob zone off by means of the control. Do not rely on the pan detectors.

SERVICE INFORMATION

For help with the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

☎ UK: 01522 875520

For non-UK customers, please contact your local Lincat dealer

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- x Brief details of the problem
- x Product code
- x Type number
- x Serial number

} All available on serial plate

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

GUARANTEE

This unit carries a comprehensive UK mainland 2 year warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights.

The guarantee does not cover:

- x Accidental damage, misuse or use not in accordance with the manufacturer's instructions
- x Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- x Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages.
Attendance is based on reasonable access to the appliance to allow the authorised technician to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.